

ENGLISH

INSTRUCTION MANUAL



THREE-IN-ONE GAMING SYSTEM
2.4 GHz EDITION



 
 **HYPERKIN**[®]
PLAY WELL. LIVE WELL.

www.hyperkin.com


ENGLISH / TABLE OF CONTENTS 01
Package Contents 02
RetroN [®] 3 Layout 03
RetroN [®] 3 Setup 04
RetroN [®] 3 Wireless Controller Setup 05
Syncing and using the Wireless Controllers 05
Playing Games 06
Using NES, SNES, or Genesis Controllers 06

Thank you for purchasing the RetroN® 3 Gaming System. For your safety and the safety of others, please carefully read the instruction manual before using this product.


PACKAGE CONTENTS

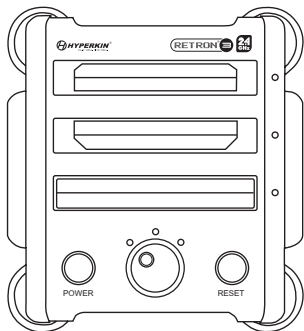


RetroN® 3 Console

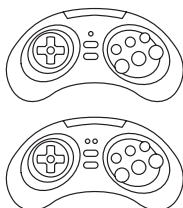 


2- RetroN® 3
Wireless Controllers

 

AC Adapter

 

S-Video Cable

 


AV-Cable


For troubleshooting, contact us at support@hyperkin.com.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
RetroN® 3 LAYOUT

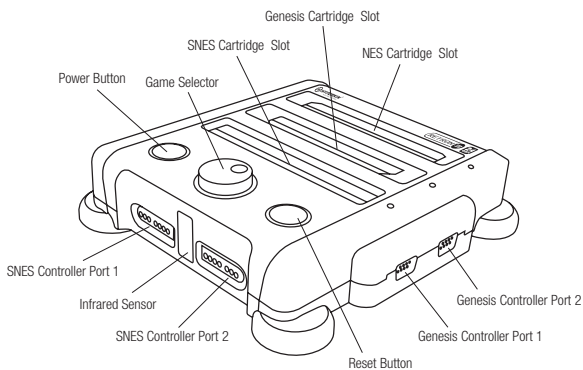

FRONT

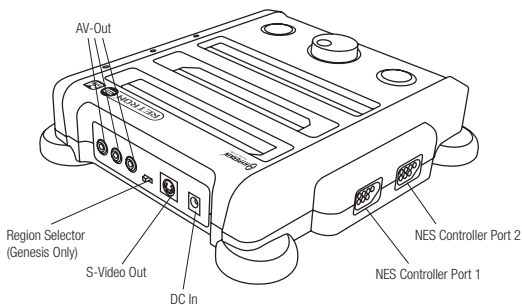 


BACK

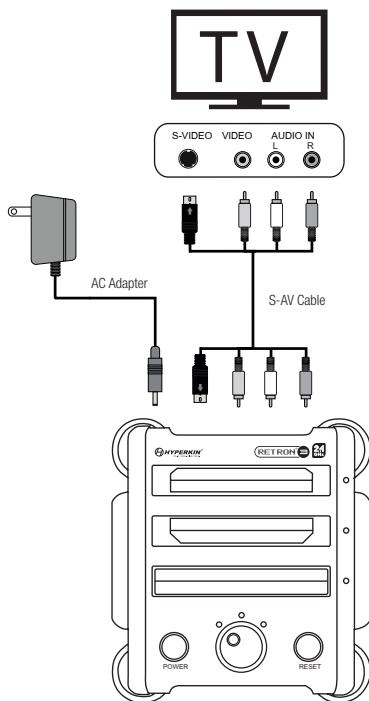 

1. Insert the AV/S Cable into the AV or S-Video Out (video output only) on the RetroN 3.
The S-Video function only works on SNES and Genesis games.
2. Insert the other end of the AV/S Cable into the AV or S-Video ports on the TV.
3. Insert the AC Adapter into the DC port on the RetroN 3.
4. Plug the AC Adapter into a power outlet.

 RetroN® 3 WIRELESS CONTROLLER SETUP

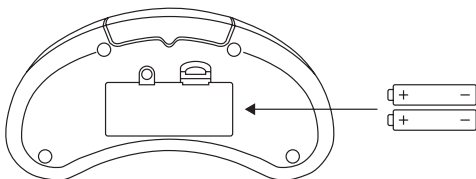

1. Unscrew the screw on the battery cover and remove the battery cover.
2. Insert two (not included) AAA batteries into the battery port.
3. Place the cover back on the battery port and secure it with the screw.
4. Begin using the wireless controller by positioning yourself in front of the RetroN 3's Infrared Sensor, located in the front of the RetroN 3.

Note: The dot located on the face of the controller indicates which controller is synced to which player. One dot indicates Player 1, while two dots indicate Player 2.



SYNCING AND USING THE WIRELESS CONTROLLERS



NES	GENESIS	SNES
BB • X	Y • X	Y • X
AA • Y	X • Y	X • Y
A • B	Z • Z	R • Z
B • A	B • A	B • A
	A • B	A • B
	C • C	L • C

1. Turn on RetroN 3.
2. Within 30 seconds after turning on the console, hold down the Select/Mode button and the Start/Reset button simultaneously for 10-15 seconds. Your controller should now be synced.

  
PLAYING GAMES

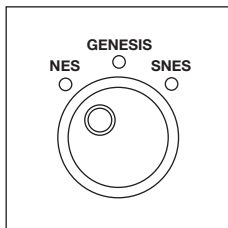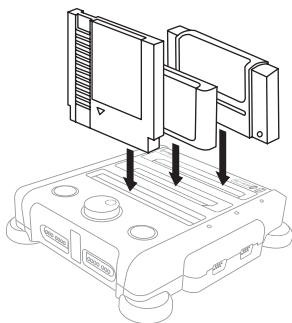

1. Insert the cartridge into its appropriate slot (NES, SNES, or Genesis).
2. Turn the Game Selector Knob to the corresponding system (NES, SNES, or Genesis).
3. Turn ON the RetroN 3 by pressing the Power button.

Note: There is a switch on the back labeled "O/J" which lets you switch the region of your Genesis slot. "O" for Genesis and "J" for Mega Drive (Japan).

 Using NES, SNES, or Genesis Controllers



NES Controller



SNES Controller



Genesis Controller



With the RetroN 3 turned OFF, insert the controller(s) into their corresponding slot (NES, SNES, or Genesis).

Note: NES, SNES, and Genesis controllers (not included) are only playable with their corresponding systems.

©2015 Hyperkin®. Hyperkin® and RetroN® and their logos are trademarks and/or registered trademarks of Hyperkin, and/or its affiliated companies. All other product names and images, trademarks or registered trademarks are properties of their respective owners. This is a product 100% NOT official and is NOT manufactured, guaranteed, sponsored, endorsed or approved by Nintendo nor Sega. Made in China. All rights reserved. Product features, appearances and specifications may be subject to change without notice. Please retain this information for future.

